

1. Install Voxeldance Tango


ELEGOO Voxeldance Tango software is saved in the U Disk. Choose the right version and install it on your computer, or you can download the latest version from www.elegoo.com/download.

Activate Voxeldance Tango

2.1 After installing the software, double-click to run the ELEGOO Voxeldance Tango software, and select "Activate your license" in the pop-up window (See Picture 1)

2.2 After selecting "Activate your license", a new window will pop up. In the new window, click on "Activate" in "Activate with Hardware Code" under "License*". (See Picture 2)


2.3 Enter the printer's 10-digit hardware code in the input field below "Printer Hardware Code" in the window (see point 3 below), and fill in other information as prompted to complete the software activation. (See Picture 3)

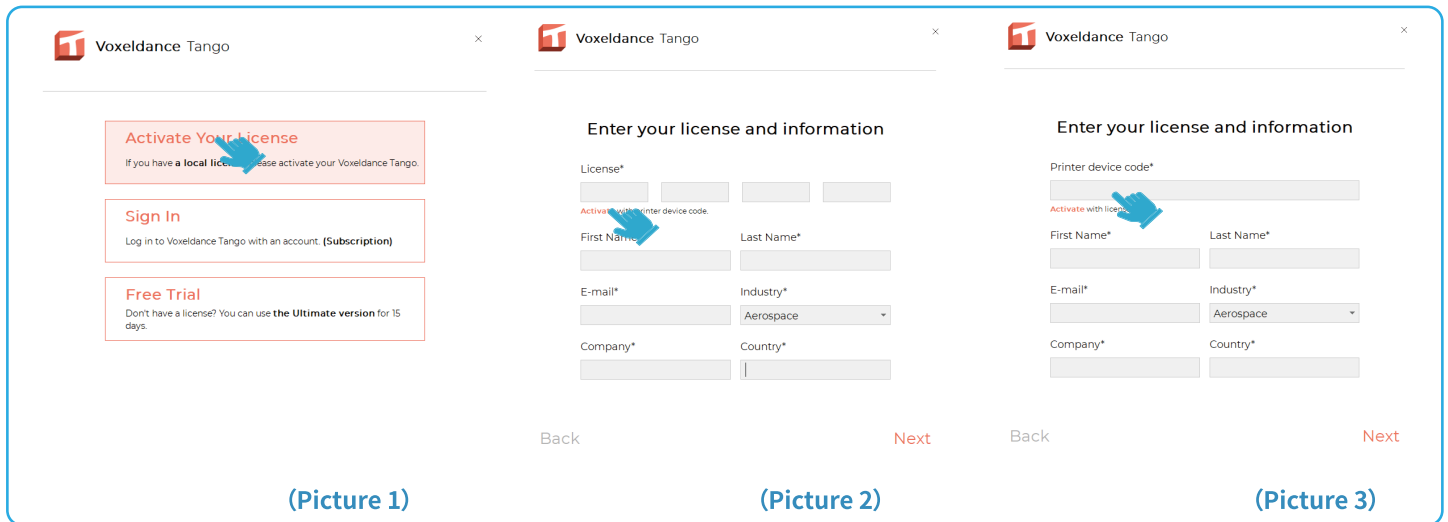

3. How to get the printer hardware code

3.1 Please power on the 3D printer and turn on the power switch of the printer; and the printer is in a normal power-on state.

3.2 Please select "Settings" - "System" in turn, as shown in the "System" interface, the 10-digit code of the "ID" item is the "Printer Hardware Code". (See Picture 4)

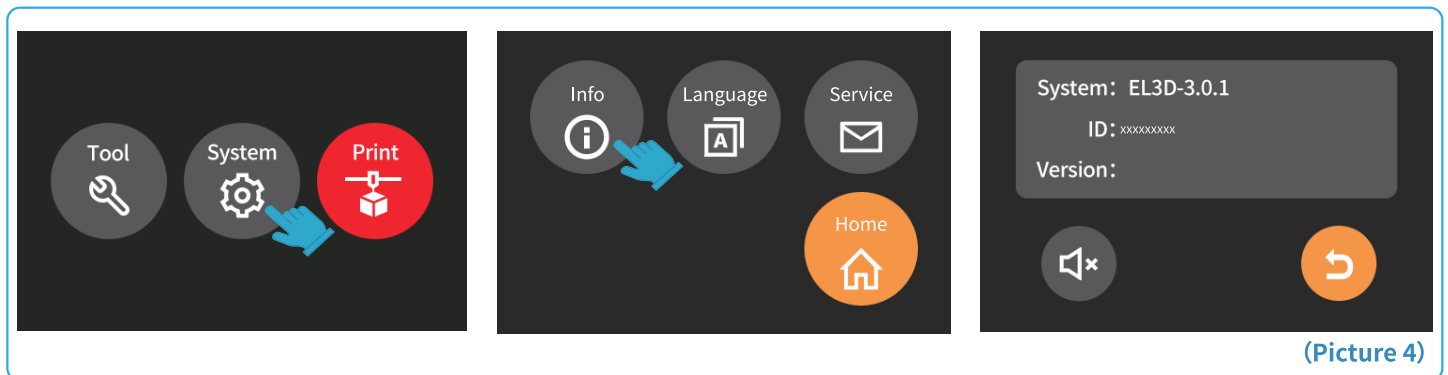

(Picture 4)